



OWNER'S INSTRUCTIONS & SAFETY MANUAL

PLEASE READ AND UNDERSTAND THIS ENTIRE MANUAL BEFORE ALLOWING A CHILD TO USE THIS PRODUCT

THIS MANUAL CONTAINS MANY "WARNING" AND "CAUTIONS" NOTES CONCERNING THE CONSEQUENCES OF FAILING TO OBEY SAFETY RULES and for MAINTAINING and Inspecting YOUR Roller Racer® GoKart. BECAUSE ANY INCIDENT CAN RESULT IN SERIOUS INJURY OR EVEN DEATH, WE DO NOT REPEAT THE WARNING OF POSSIBLE SERIOUS INJURY OR EVEN DEATH EACH TIME SUCH A WARNING IS MENTIONED. ADULT ASSEMBLY REQUIRED

Warning: Direct adult supervision is required at all times. This manual contains important safety information so please read the following safety rules. It is your responsibility to review this information and make sure your child obeys all warnings, cautions, instructions, and safety topics; and to ensure young riders are able to use this product safely. Kids need to be taught the importance of safe riding and need have this frequently reinforced to them.

Warning: Keep fingers clear of the connector system mechanism when assembling or disassembling the Go Kart. Do not allow children to assemble or disassemble this product. Always check that all the parts are tight and well attached before riding.

Warning: Riding a Go Kart can be a hazardous activity. Certain conditions may cause the equipment to fail without fault of the product or its manufacturer. Like other wheeled products, a Go Kart can and is intended to move and it is therefore possible to lose control, fall off and/or get into dangerous situations that no amount of care, instructions or expertise can eliminate. If such things occur, your child can be seriously harmed or die, even when using safety equipment and other precautions.

Warning: This toy should be used with caution since skill is required to avoid falls or collision causing injury to the user or third partiest.

Warning: Never use on open roads and/or near car traffic. Roller Racer® Go Kart is meant to be used only in controlled environments free of potential traffic hazards and not on public streets. Because it is low to the ground, car drivers may not be able to see you.

Warning: Avoid downhill rides that can create excessive speed; the brake is not designed for that use and will result in the damage to the wheel if used at high speed (which means that you will have to replace the wheels and this is not covered by the warranty).

Warning: Keep your fingers and other body parts away from the wheels and other moving parts when operating.

Warning: Do not ride at night or when visibility is impaired.

Warning: Do not ride near electricity sources, heat or other dangerous hazards.

Warning: Wet, slick, uneven, and rough surfaces may impair traction and contribute to possible accidents.

Warning: Do not ride more than one person at a time. Always stay seated on the seat when using your Go Kart. Never push or pull a Go Kart. It is designed to move with its zig-zag or snake-like propulsion method on a flat surface.

Warning: Always pin up or tie up one's hair and apparel so that they don't touch the ground and wheels. Maximum recommended weight: 154 lbs

Warning: Never use near swimming pools, steps, sloped driveways, hills, roadways or alleys.

PARTS INCLUDED WITH TOY:

- Seat & Frame (connected by seat fabric)
- Front Pivot with T-Bar
- 1 Extension Bar
- 2 Screws
- 1 Allen Wrench+1 Allen key

ASSEMBLY INSTRUCTIONS


1. ATTACH SEAT



2. ATTACH PIVOT BAR



3. ATTACH EXTENSION BAR & PIVOT BAR

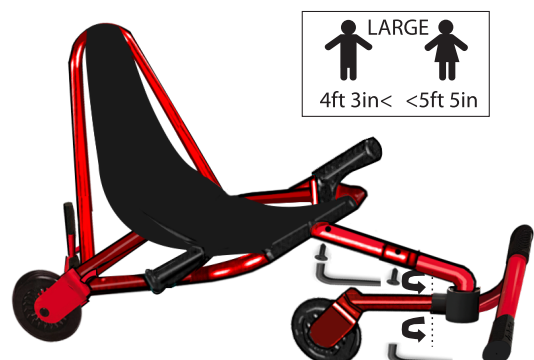

How to use your Roller Racer® Go Kart

1. First sit on the seat, place your feet on the foot bar, and swing the bar back-and-forth; this will propel you forward. If you move the foot bar with bigger and faster swings, you'll go faster. Experiment trying to make bigger movements and then increase the rhythm to increase your speed! t your feet on the ground.
4. NOTE: Be careful when getting on and off of your Go Kart; Always wear proper safety equipment including closed toe shoes
5. As you develop your skills HAVE FUN making races, slaloms and invent games with your friends!
6. Strictly follow the safety instructions contained in this manual.,the seat and the box
7. Be extremely careful when using your Go Kart - never use in driveway, near car or traffic – never use on a slope; the brake is not designed to stop in a slope and it will only damage the wheels which will need to be replaced otherwise it can damage the structural of your Go Kart. Never put fingers/hands near turning wheels. Never let loose clothes or hair touch the ground or the wheels; always pin-up or secure loose hair and clothes.

Safety Check-List (Before Each Ride)

1. Loose parts. Lift the front part off the ground two or three inches and let go so it can bounce on the ground. Does everything sound tight? There should not be any unusual rattles or sounds from loose parts or broken components. If you are not sure, ask an experienced mechanic to check. Always ensure the extension is properly tightened
2. Brake. Check the brake for proper function. Make sure you and your kid know where it is located and you can reach it easily. When you pull the lever the brake should make contact against the wheel and provide braking action.
3. Frame, Seat and T-bar. Check for cracks or broken connections. Although broken frames are extremely rare, bashing into a curb or wall can wreck and bend or break a frame, seat or handlebar. Get in the habit of inspecting your Roller Racer® Go Kart regularly and before each ride.
4. Safety gear. Always wear proper safety equipment including approved safety helmet and shoes. Always follow safety regulations and never use on open roads and/or near cars, slopes or hills. Do not wear loose apparel or anything that can touch the ground; please attach long hair so that they don't come near the wheels or the ground.



YOUR Roller Racer® Go Kart LIMITED WARRANTY

Thank you for purchasing a Roller Racer® product. We at Big Time® Toys pride ourselves in designing and making superior quality products with outstanding play values. Maximum care has been taken to develop and manufacture this toy. We understand that there's nothing more frustrating than buying a product that breaks. So that's why you have a warranty!

• What does the warranty cover/not cover?

This Limited Warranty covers any defects in material or workmanship

- It covers the steel frame and all the parts attached to it.
- It doesn't cover the wear and tear of the seat, hand/foot grips and wheels.
- It doesn't cover any damage, failure or loss caused by improper assembly, maintenance, storage or misuse
- It doesn't cover any commercial and/or school/preschool use.
- It also doesn't cover any wear and tear from downhill use, even on small slopes.

• What is the coverage period?

- Your Roller Racer® Go Kart warranty is for a 12 month period from the date of purchase.

• How does the Roller Racer® Go Kart warranty work?

- BEFORE sending anything back, you must first contact us to access the problem and we will determine the most appropriate solution for you. You can contact us by email at info@bigtimetoys.com
- Just send a couple of pictures depicting your problem.

• What will we do to correct the problems?

- Once we have determined the problem and the most appropriate solution for you, we will either send you a replacement part or a complete new product.
- We will pay shipping and handling charges

• How will the state law affect your customer' rights under the warranty

- This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

SIMPLE ADULT ASSEMBLY

